

Please go to www.quoizel.com for product cleaning tips. Go to the **Care + Maintenance** selection.

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: LED 17W

Compatible Dimmer Switches: Lutron DVELV-300P or Lutron SELV-300P.

Estimated Assembly Time: 30-45 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Package Contents

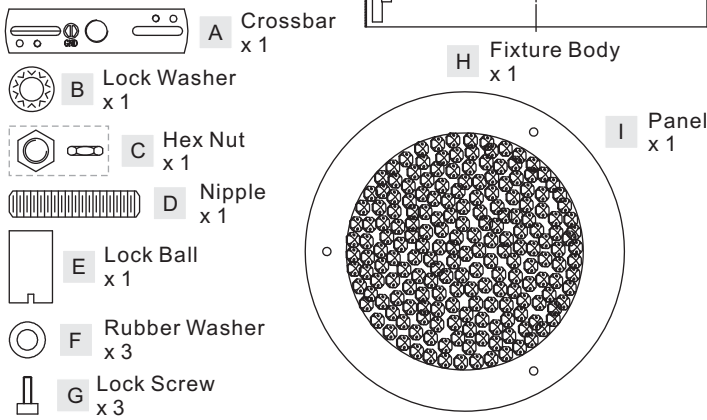

(Step 2 Continued)

Lock Washer (B) unscrewing the Hex Nut (C) and the Lock Washer (B) and then screwing the Nipple (D) in or out of the Crossbar (A) until the correct length is achieved. Once the ceiling of Fixture Body (H) is secure, remove the Lock Ball (E) and Fixture Body (H) and proceed to step 3.

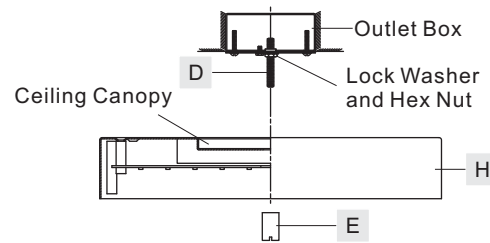


Figure 2

STEP 1 - Install Crossbar and Nipple

A. Secure the Crossbar (A) to the Outlet Box with Outlet Box Screws. Tighten until snug.

* Pliers is required on this step.

B. Thread the Hex Nut (C) onto one end of the Nipple (D). Place the Lock Washer (B) over the Hex Nut end of the Nipple (D) and then thread the Nipple (D) into the center lock hole of the Crossbar (A). Using pliers, thread the Hex Nut (C) against the Crossbar (A) and hand tighten until snug.

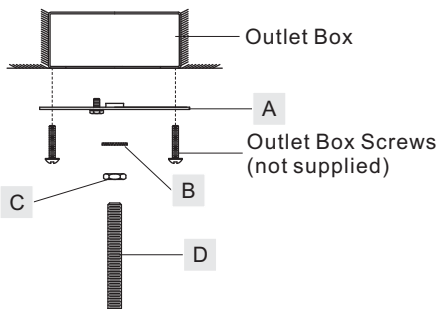


Figure 1

STEP 3 - Wire Connections

A. Wrap bare or green ground wire around green ground screw on the crossbar, no less than 2 inches from the end of the wire. Tighten the green ground screw.

B. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

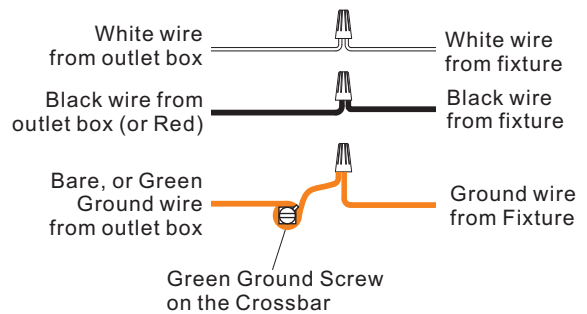


Figure 3

STEP 2 - Test Fitting Fixture Body to Crossbar Assembly

A. Fit the Fixture Body (H) over the Nipple (D) and secure with the Lock Ball (E). The ceiling canopy of the Fixture Body (H) should be snug against the ceiling and the Lock Ball (E). If not, adjust the length of the Nipple (D) by unscrewing the Hex Nut (C) and the

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com

STEP 4 - Install Fixture Body

A. Carefully tuck all wires into the outlet box and position the ceiling canopy of the Fixture Body (H) over the outlet box. Attach the ceiling canopy of the Fixture Body (H) over the Nipple (D) and secure with the Lock Ball (E). Hand tighten until snug.

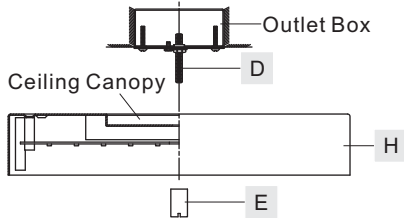


Figure 4

STEP 5 - Attach Panel to Fixture Body

A. Attach the Panel (I) onto Fixture Body (H) with crystal beads upwards. Place Rubber Washers (F) over Lock Screws (G) and thread Lock Screws (G) into Lock Rods until snug to secure the Panel (I). Hand tighten until snug.

Your fixture is now assembled and ready to use. Enjoy!




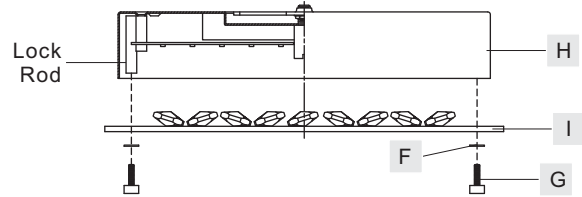


Figure 5

PCBZ1612C

FINISH: POLISHED CHROME

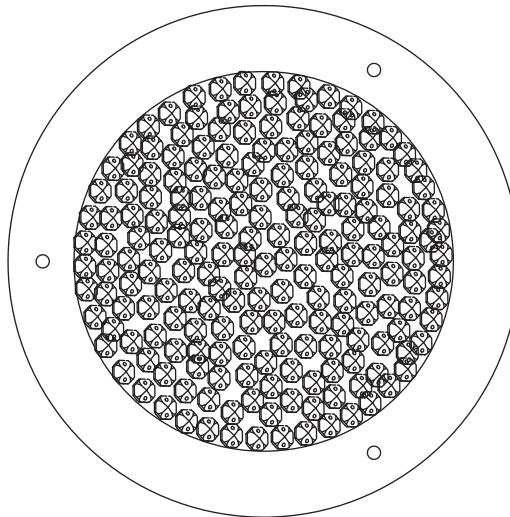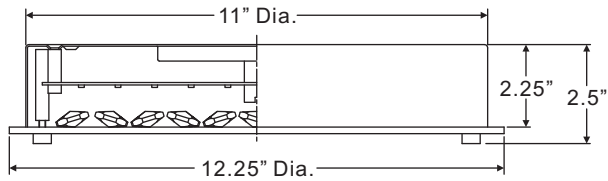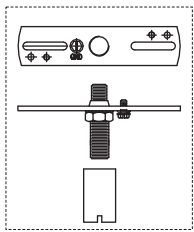

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

Thank you for purchasing a Quoizel product.
Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700
or visit us on-line at www.quoizel.com